


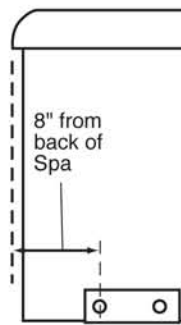

COVER ROCK-IT



Figure 1




COVER VALET™
THE CONSUMERS' CHOICE.
ROCK-IT
INSTALLATION INSTRUCTIONS

Step #1

Position your spa cover (in the closed position) on the spa, making sure all four corners are lined up with the corners on the spa.

Figure 2

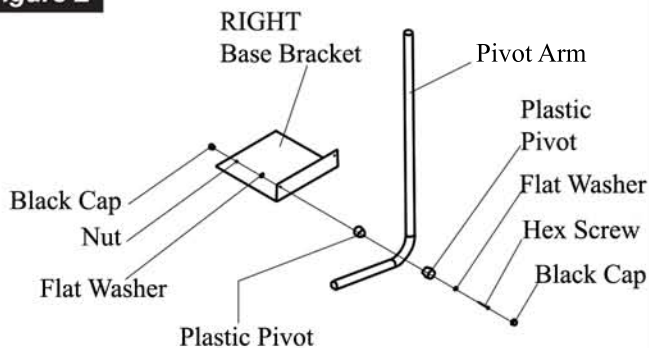

Step #2


Slide the Under-Mount Base Brackets under the spa. (See Fig. 1)

Note: Be sure to use the Pivot Hole closest to the back of the spa.

Step #3

Attach the Pivot Arms to the Base Bracket. (See Fig. 2) After arms are attached, tilt them to the upright/vertical position.

Figure 3

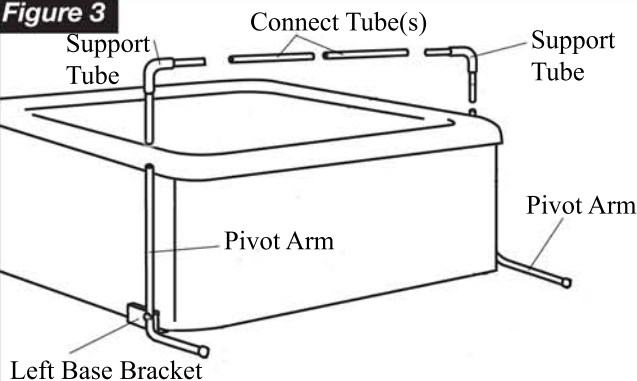

Step #4

Insert the LONG end of the Support Tube in to each Pivot Arm. (See Fig. 3) Next (depending on the size of your spa,) use 1 or both of the supplied Connect Tubes to join the Top Support Tubes.


Step #5

Lay the Cover Rock-it on the closed spa cover. Adjust and center the Connect Tube(s) and Support Arms so that the Connect Tube(s) is lying parallel to the spa cover's hinge about 1/2" away. (See Fig. 4)

Use the Self Tapping Screws to fasten the Pivot Arms to the Support Arms and the Support Arms to the Connect Tube(s)

Note: The Support Tube should be rotated so that the Self Tapping Screws are horizontal so as not to damage the cover with the screw head.

Figure 4

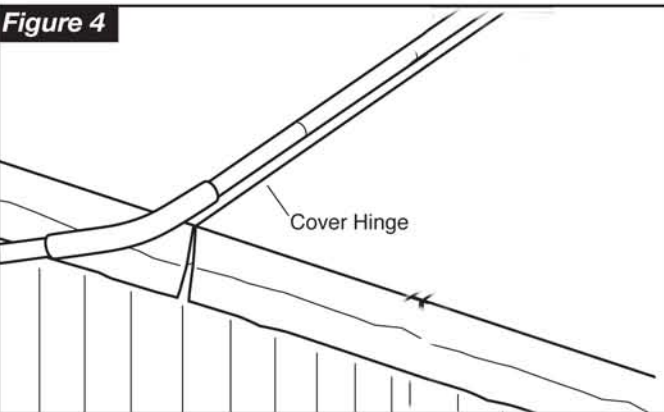

CAUTION!

DO NOT USE THE ROCK-IT IN HIGH WIND CONDITIONS (ABOVE 10 MPH.) SPA COVER CAN BLOW OVER AND DAMAGE PROPERTY OR CAUSE INJURY